




1. Clean the garbage and check if the gap is equally wide and straight.

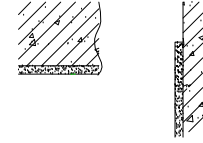


2. The decorative level must be straight.

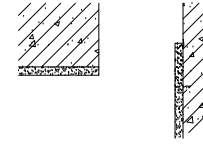

3. Install the fire barrier

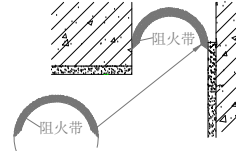

4. Install the aluminum Clip and fix with cinch bolt

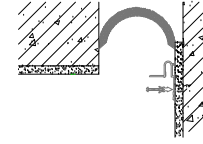

5. Install the aluminum Cover Plate

